

A NEW CLEANING CONCEPT

AMERICAS

Cyber Clean
SWISS FORMULA

THE HIGH-TECH CLEANING COMPOUND
DEEP CLEANING ACTION!

**Deep Cleans
and Removes the
dirt you see and the
nasty and harmful stuff
you can't see!**

**Patented
Non Toxic
Biodegradable**







THE HIGH-TECH CLEANING COMPOUND

DEEP CLEANING ACTION!

PATENTED - NON TOXIC - BIODEGRADABLE

Dirt and dust get stuck in keyboards, a known and serious health problem!

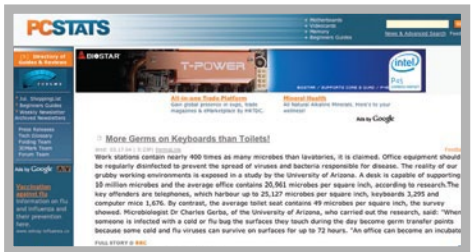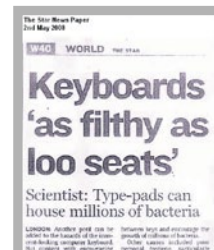


What is Cyber Clean®?

Tests around the world have proven that keyboards have a higher level of harmful dirt than public toilets and often store tremendous amounts of waste (such as hair, dead skin, food and dust)! A dirty and often contaminated keyboard, the remains of toner in the printer and other dirty objects can harm your health and seriously compromise the performance of your electronic devices. Cyber Clean® is the solution!

Cyber Clean® is a revolutionary cleaning compound! When it comes to cleaning action in cavities and where conventional cleaning products have physical limits. Cyber Clean® gets into cavities because of its perfect combination of viscosity elasticity and its patented formula, it absorbs dirt and any other residues and provides deep cleaning action in the cavities and on the surface!

Cyber Clean® is very simple and highly efficient! Just press and pull Cyber Clean® on the surface of your device, and all dirt will be trapped in the material and all the disgusting things living inside your keyboard will be pulled off.

The patented Cyber Clean® one way Membrane Effect. Dirt goes in only, no migration, your hands stay safe and clean!

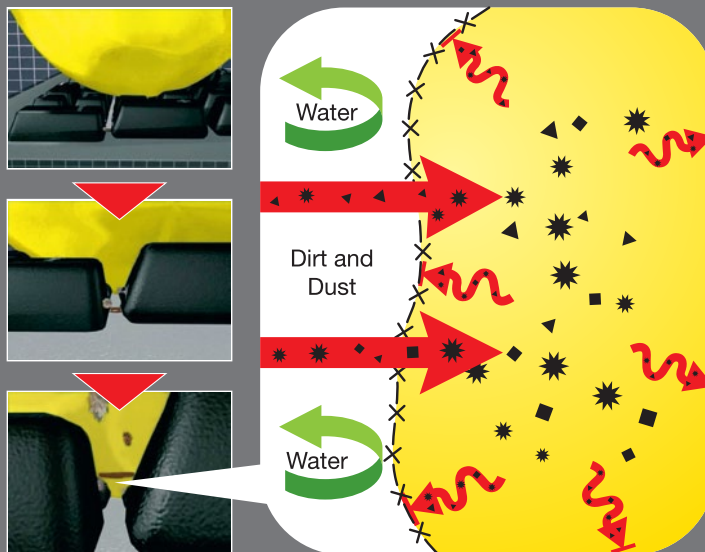

Selling Points

What makes this high tech cleaning compound so amazing and unique?

Patented, Non Toxic, Biodegradable

Removes Harmful things you see and the harmful stuff you don't see!

Gets into areas where no other cleaner can safely get into

Safely removes Dirt and Grime; therefore, safer and healthier for user

Swiss Patented Formulation

Re-usable 75+ times

Strength Meter on the back of package tells consumer when to buy a new Cyber Clean® (it is a consumable)

Leaves no residue

Press It In and The Dirt is Gone

Enhances the performance of your devices

Hands stay safe and clean

Unique Micro-encapsulation Process- Dirt goes in but will not come out.

You can use Cyber Clean® EVERYWHERE!

So easy anyone can use

Cyber Clean® Comes in TWO versions:
Cyber Clean® Home & Office
Cyber Clean® Automotive

Cyber Clean® is reusable until it changes color



New and fresh. Ready for use!



Good to use but you will need a new Cyber Clean® soon.



You need to replace your Cyber Clean® for a new one.



Frequently Asked Questions

Can I wash Cyber Clean® or do I have to trash it after one use already?

Cyber Clean® absorbs particles of dirt etc. and binds them; this means that these particles can't escape Cyberclean. The more dirt Cyber Clean® absorbs the more the mass changes color (the yellow "Home & Office" from yellow to green and the "Automotive" from blue to greyish brown). A color-scale on the packaging gives you this information. Once the mass has changed color and is no longer able to absorb more dirt as shown on the packaging then it is time to be replaced.

Why is Cyber Clean® sometimes feeling different in my hands?

Cyber Clean® has a constant pH-value of about 7. On your skin you have an acid-mantle because sweat is slightly acidic. Such substances and other residues that might be on the hand (skin) may react with Cyber Clean® and therefore the mass may "feel" different from time to time. Just knead your Cyberclean until your hands adjust to the PH Balance of Cyberclean.

What happens with the germs that are absorbed by Cyber Clean®?

Cyber Clean® absorbs Harmful dirt and this dirt is never transferred or migrates to another surface when used!

Is Cyber Clean® harmful to the environment?

Cyber Clean® comprises exclusively of substances that are not harmful to the environment. Cyber Clean® is friendly for the environment as it is biodegradable and Non-Toxic!

Do I need to follow special instructions when disposing Cyber Clean®?

Cyber Clean® is biodegradable and is not harmful to the environment. You can throw your Cyber Clean® in the regular garbage can and that is just fine.

99 Reasons to Use Cyber Clean®

Cleaning Professionals for major commuting locations:

1. Fare-card machine keypads
2. Turnstiles
3. Escalator handrails
4. Handrails of stairs
5. Subway car handles and straps
6. Subway seats and poles
7. Bus seats and handles
8. Revolving door handles
9. Gas pump keypads
10. Gas pump nozzles
11. Car door handles and locks
12. Dashboard surfaces and buttons
13. Toll booth tickets and currency

At Work you should use Cyberclean® on:

14. Computer keyboard
15. Computer mouse
16. Photocopy machine keypads
17. Fax machine keypads
18. Calculator keypads
19. Printer buttons and trays
20. Staplers and other office supplies
21. Doorknobs and handles
22. Light switches
23. Elevator buttons
24. Handrails of stairs
25. Office and conference room phones
26. Laptop computer keypads
27. Vending machine keypads
28. Staff room refrigerator handle
29. Staff room microwave handle

On Vacation / Traveling you should use Cyberclean® on:

30. People mover handrails
31. Pay phone buttons
32. Pay phone receivers
33. Vending machine keypads
34. Currency at fast food restaurants
35. ATM machine keypads
36. Plastic security buckets at airports
37. Airplane seat rests
38. Airplane blankets and pillows
39. In-flight magazines
40. Hotel room key cards
41. Hotel room remote controls
42. Hotel room A/C controls

Athletic Trainers should use Cyberclean® to clean Working Out / Weight Room's at the Gym:

43. Treadmill keypads
44. Elliptical machine keypads and handles
45. Stepper machine keypads and handles
46. Stationary bike keypads and handles
47. Rowing machine handles
48. TV remote controls
49. Abdominal equipment handles and headrests
50. Weight machine handles
51. Free weights and barbells
52. Exercise and stretching mats
53. Medicine balls
54. Jump rope handles at Home
55. Computer keyboards and mouse

Parents Should Use Cyberclean® for cleaning:

56. Toys for pets
57. Remote control devices
58. Thermostats
59. Light switches
60. Doorknobs and handles
61. Kitchen counter tops
62. Kitchen sponges

63. Refrigerator door handles
64. Oven door handles
65. Microwave door handles
66. Stairway railings
67. Shopping cart handles
68. Shopping basket handles
69. Bulk-food scoop handles
70. Tongs for baked goods
71. Currency
72. Credit cards
73. ATM machine keypads
74. Stair handrails
75. Escalator handrails
76. Elevator buttons
77. Public rest room surfaces
78. Hand soap dispensers
79. Paper towel dispensers
80. Bathroom door handles

School Teachers Should Use Cyberclean® on:

81. School bus seats and handles
82. Shared toys
83. Library books
84. Crayons
85. Mats
86. Cafeteria trays
87. Bathroom surfaces
88. Doorknobs and handles
89. Playground equipment
90. Vending machine keypads
91. Sports/gym equipment

At Movie Theaters, Sports Events, Clubs:

92. Seats
93. Bar surfaces
94. Arm rests
95. Condiment/napkin area surfaces
96. Tickets
97. Video game controls
98. Pinball machine buttons
99. Cigarette lighters

Cyber Clean® can be used Anywhere!

